

INSTALLATION TECHNIQUES FOR MODEL PE AND HT CASING SPACERS


Steps 1 - 3 listed above should be followed for all GPT Casing Spacers



1. Size the casing spacers using charts on appropriate product pages. When opening packaging, make sure you have the correct amount of segments, bolts and nuts for your application.



2. Pre-assemble segments by inserting bolts through spacer segments and hand tightening nuts. Leave one segment open so you can position the "belt of segments" around the pipe.

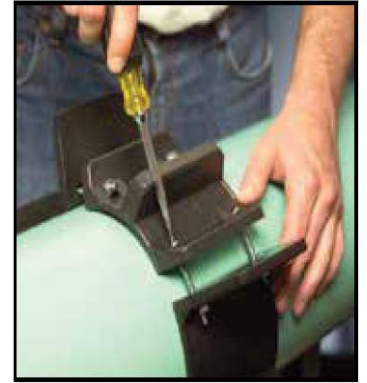

3. Position belt around pipe and secure all segments by tightening all bolts with standard screw driver or allen head (Model AZ).